

# Sentriant<sup>®</sup> AG200 Hardware Quick-Start Guide

## Getting Documentation

Detailed information about installing and using the Extreme Networks<sup>®</sup> Sentriant<sup>®</sup> AG appliance is available in the following documents:

- *Sentriant AG200 Hardware Installation Guide*
- *Sentriant AG Software Installation Guide*
- *Sentriant AG Software User Guide*

These documents are available in the /usr/local/nac/webapps/ROOT/docs/ directory on the appliance or on the installation media shipped with the appliance.


In addition, documentation for Extreme Networks products is available from the Extreme Networks website at the following location:

<http://www.extremenetworks.com/services/documentation>


## Installing the Appliance

Install the Sentriant AG appliance in a standard 19-inch (48.26 cm) rack as follows:


- 1 Attach the mounting brackets to each side of the Sentriant AG appliance, using the provided screws

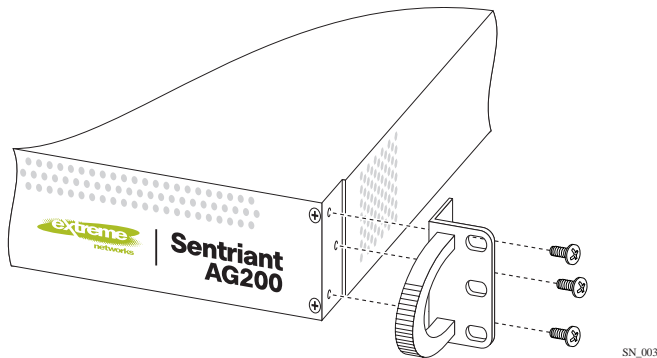

- Slide the chassis into the rack and secure the brackets to both front posts using mounting hardware appropriate to your organization's rack.

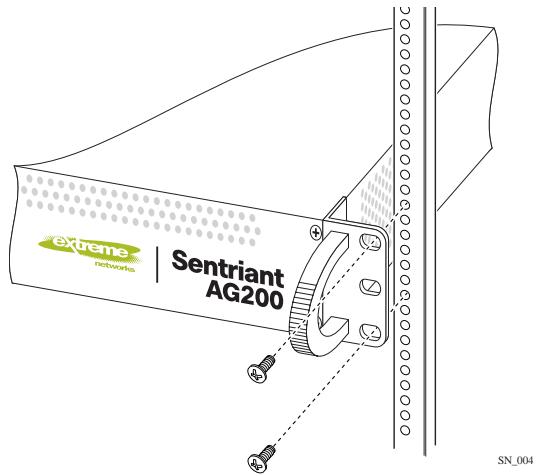

- Connect the AC power cable from the power connector on the back of the Sentriant AG appliance to an active power outlet.

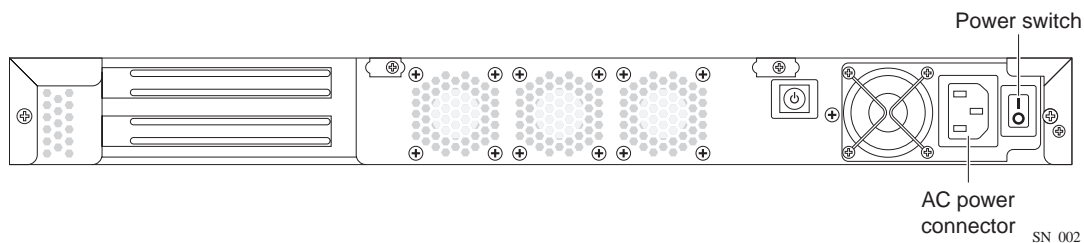

- Press the power switch to the on position.

## Connecting Cables

The Ethernet port connections can vary depending on the type of deployment. For details about the types of deployments, refer to Chapter 2, “Deployment Flexibility,” in the *Sentriant AG Software Installation Guide*.

In general, connect the Ethernet ports as follows:

- Connect port eth0 to the corporate LAN (the internal network side).
- Connect port eth1 to a switch, a virtual private network (VPN), or a DHCP server.

## Setting Up the Appliance

To perform the initial setup for your Sentriant AG appliance, refer to Chapter 4, “Startup and Configuration,” in the *Sentriant AG200 Hardware Installation Guide*.

For information about configuring the Sentriant AG appliance, refer to Chapter 4, “Installing Sentriant AG,” in the *Sentriant AG Software Installation Guide*.